ACCESSORIES AVAILABLE ACCESORIOS DISPONSIBLES ACCESSOIRES DISPONSIBLES

BC601 4 oz. Bostitch Air -Tool Lubricant
BC602 1 pint Bostitch Air -Tool Lubricant

BC603 1 pint Bostitch "Winter-Formula" Air-Tool Lubricant

BC604 1 quart Bostitch Air -Tool Lubricant

851385 Loctite Grade 242 (.02 oz.)

N80K2 Remote Control Kit

121072 Softfoot

112630 Dust Shield

112631 Spring Clip for Dust Shield

N89ORK Kit, O-ring Repair

BOSTITCH°

F28WW

PNEUMATIC STICK NAILERS CLAVADORA NEUMÁTICA ALIMENTADA POR BARRA CLOUEUR PNEUMATIQUE EN BANDES



TOOL PARTS ILLUSTRATION ILUSTRACIÓN DE LAS PIEZAS DE LA HERRAMIENTA ILLUSTRATION DES PIÈCES D'OUTILLAGE

AWARNING:

A ADVERTENCIA:

A ATTENTION:


BEFORE PERFORMING REPAIRS ON THIS TOOL, ALL OPERATORS SHOULD STUDY THIS ILLUSTRATION, AS WELL AS THE PARTS LIST AND OPERATION AND MAINTENANCE MANUAL. OPERATORS SHOULD UNDERSTAND AND FOLLOW ALL SAFETY WARNINGS AND INSTRUCTIONS. KEEP THIS ILLUSTRATION WITH THE TOOL FOR FUTURE REFERENCE. IF YOU HAVE ANY QUESTIONS, CONTACT YOUR BOSTITCH REPRESENTATIVE OR DISTRIBUTOR.

ANTES DE LLEVAR A CABO CUALQUIER REPARACIÓN EN LA HERRAMIENTA, TODOS LOS OPERARIOS DEBERÁN ESTUDIAR ESTA ILUSTRACIÓN, ASÍ COMO LA LISTA DE PIEZAS Y EL MANUAL DE OPERACIÓN Y MANTENIMIENTO. LOS OPERARIOS DEBERÁN ENTENDER Y SEGUIR TODAS LAS ADVERTENCIAS E INSTRUCCIONES DE SEGURIDAD. CONSERVE ESTA ILUSTRACIÓN CON LA HERRAMIENTA PARA PODER CONSULTARLA EN LO FUTURO. SI TUVIERA ALGUNA PREGUNTA, PÓNGASE EN CONTACTO CON SU REPRESENTANTE O DISTRIBUIDOR DE BOSTITCH.

AVANT DE PROCÉDER À LA RÉPARATION DE CET OUTIL, LES OPÉRATEURS DQIVENT ÉTUDIER LA PRÉSENTE ILLUSTRATION AINSI QUE LA LISTE DE PIÈCES ET LE MANUEL D'INSTRUCTIONS ET D'ENTRETIEN ; ILS DOIVENT ÉGALEMENT COMPRENDRE ET OBSERVER LES CONSIGNES DE SÉCURITÉ ET LES INSTRUCTIONS. CONSERVER CETTE ILLUSTRATION AVEC L'OUTIL POUR RÉFÉRENCE FUTURE. SI VOUS AVEZ DES QUESTIONS, COMMUNIQUEZ AVEC VOTRE REPRÉSENTANT OU VOTRE DISTRIBUTEUR DE BOSTITCH.

IP1211-1REVE 5/06

BOSTITCH[®] Stanley Fastening Systems L.P.

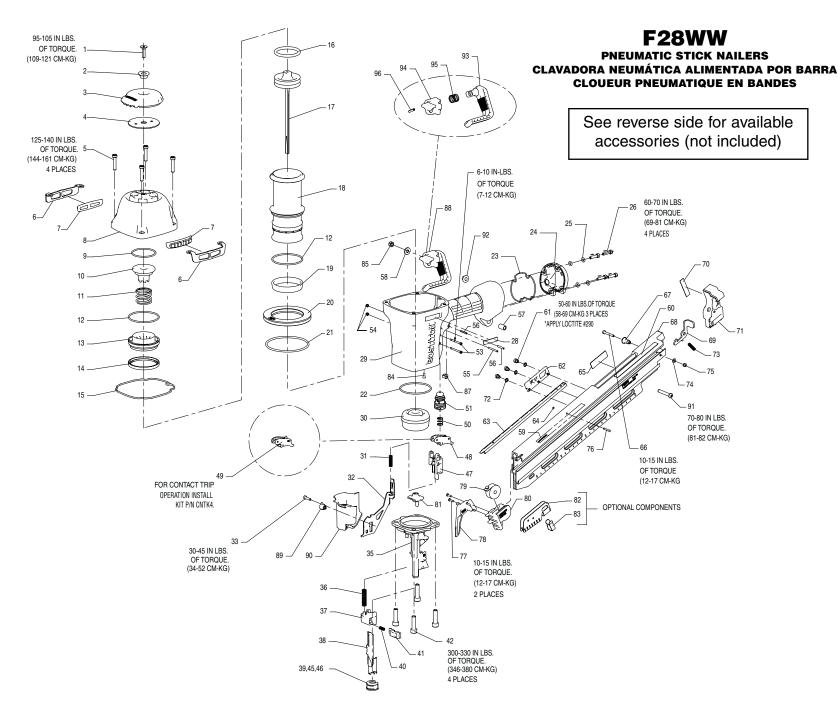

BOSTITCH

	F28WW	Parts	s List:	IP1211-2REVH	
	To be U	sed with tool parts illustra	ation:	IP1211-1REVE	
	and opera	ntion and maintenance ma	anual:	166762	
	•	Serial Number on the			000 and Higher
		Geriai ivanibei on uie	1001.	1 200000 7010	
ITEM	PART #	DESCRIPTION	ITEM	PART #	DESCRIPTION
1	MSF6100-25	SCREW,SFHCS,M6X1.00X25	59	158612	LABEL,WARNING
2	163859	BUSHING, EXHAUST DEFLECTOR	60	112769	LABEL,N88WW FASTENER SPEC.
3	163818	DEFLECTOR,EXHAUST	61	MSC5080-6	SCREW,SHCS,M5X0.80X6
4	163830	PLATE,CAP	62	163828	NUT,TEE
5	MSC6100-30	SCREW,SHCS,M6X1.00X30	63	159718	LINER,NAIL GUIDE,N88WWB
6	163827	PLATE,WEAR	64	166797	O-RING,.056X.060 NBR
7	149819	WEAR GUIDE	65	104981	LABEL,WARNING
8	163848	FRAME CAP, MACHINING	66	100261	SCREW,SHCS,M4X30
9	105814	O-RING,1.929X.098	67	121472	SPACER,PUSHER LATCH
10	163820	BUMPER,HEAD VALVE	68	166784	MAGAZINE,PAD PRINT,F28WW
11	163844	SPRING,HEAD VALVE	69	166778	LATCH,PUSHER
12	163822	O-RING,2.487X.103XNBR	70	120927	LABEL,SENSOR SMALL (DR)
13	163821	LOWER BODY,HEAD VALVE	71	116563	CAP END,MAGAZINE
14	163823	SEAL,HEAD VALVE	72	116965	WASHER,PLAIN M5
15	163845	SEAL,FRAME/CAP	73	120878	SPRING, PUSHER LATCH
16	851606	O-RING,1.850X.210	74	MPW4	WASHER,PWN,M4
17	163922	ASSEMBLY,PISTON/DRIVER	75	MHE4070-100	ELASTIC STOP NUT,M4
18	163824	SLEEVE,CYLINDER	76	121407	PIN,SPECIAL
19	175520	SEAL,CHECK	77	100209	SCREW,STRHS,M3X0.5X12
20	163855	RING,CYLINDER SLEEVE	78	158767	PUSHER,WW
21	108718	O-RING,3.484X.139	79	115143	SPRING,CONSTANT FORCE
22	89673	O-RING,2.550X.103	80	120945	HANDLE, PUSHER
23	163856	SEAL,END CAP	81	163882	GUIDE,DRIVER
24	163843	END CAP,PAINT	82	112630	SHIELD, DUST
25	T50118	WASHER,PLAIN	83	112631	SPRING,CLIP
26	MSC5080-20	SCREW,SOC HD. CAP M5 X 20	84	163858	PLUG,EXHAUST
28	116964	LABEL,MAGNESIUM	85	MHE6100-100	NUT,ESN M6X1
29	171127	FRAME, OVERMOLD	87	164225	ACTUATOR, SMARTTRIGGER
30	107231	BUMPER, DRIVE	88 89	171354	ASSEMBLY, UTILITY HOOK
31 32	166781 163899	SPRING,UPPER TRIP ARM,UPPER CONTACT	90	163903 171338	BUSHING,TRIP COVER COVER,TRIP
33	MSC4070-16	SCREW,SHCS,M4X0.7X16	91	MSB6100-40	SCREW,SBHCS,M6X1.00X40
	<u> </u>			171342	
35 36	163927 166772	NOSE,F28WW SPRING,CONTACT ARM	92 93	171339	WASHER,UTILITY HOOK HOOK,UTILITY
37	108224	CASTING, HOUSING CONTACT	93	171340	MOUNT,UTILITY HOOK
38	108227	ARM.LOWER CONTACT	95	171341	SPRING.UTILITY HOOK
39	121072	ASSEMBLY,TRIP FOOT	95	UB3811.2	PIN, SPIROL - 5/32X3/4
40	115230	SPRING,HOUSING	90	0D0011.2	1 114, OF 1100L - 0/02AU/4
41	166777	CASTING, PLUNGER		<u> </u>	
42	MSC8125-30	SCREW,SHCS M8X30			
45	121070	FOOT,TRIP			
46	121070	CLIP,TRIP FOOT			
47	163883	GUIDE.ARM			
48	SEQ7	KIT.SEQUENTIAL TRIP CONVERSION	***************************************		
49	CNTK4	KIT, CONTACT TRIP CONVERSION			
50	100387	SPRING.COMPRESSION			
51	TVA6	KIT,TRIGGER VALVE			
53	108562	SCREW,TRIGGER PIVOT			
54	MHE3050-100	NUT,NYLON M3X.50			
55	100298	PIN,SPIRAL M3X30			
56	MPP030020	PIN.SPIRAL M3X20MM			
57	N70143	BUSHING,RUBBER			
	<u> </u>				
58	MPW6.2	WASHER.SPECIAL			